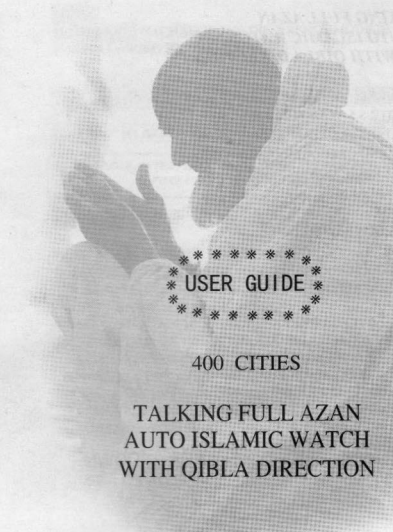 
A large, light-colored silhouette of a man in a prayer pose, facing left, serves as the background for the left page. The silhouette is centered and occupies most of the page area.

دليل المستخدم

٤٠٠ مدينة

ساعة إسلامية أوتوماتيكية
بصوت آذان كامل
وخاصية تحديد اتجاه القبلة

A large, light-colored silhouette of a man in a prayer pose, facing left, serves as the background for the right page. The silhouette is centered and occupies most of the page area.

USER GUIDE

400 CITIES

 
TALKING FULL AZAN
AUTO ISLAMIC WATCH
WITH QIBLA DIRECTION

TALKING FULL AZAN **AUTO ISLAMIC WATCH** **WITH QIBLA DIRECTION**

FEATURES:


- *400 CITIES 5 AZAN TIMES & WORLD TIMES
- *TALKING FULL AZAN
- *HIJRI AND GREGORIAN CALENDARS
- *QIBLA DIRECTION
- *AUTO ALARM
- *ALARM
- *DAYLIGHT SAVING TIME
- *TIMER

KEY DESCRIPTION

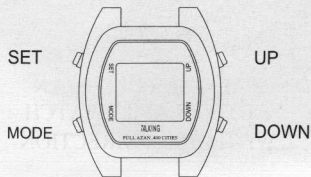

MODE

 PRESS **MODE** TO CHANGE THE DIFFERENCE MODE IN THE FOLLOWING SEQUENCE:



PLEASE NOTE: ENTER "CITY" MODE TO SELECT A CITY FIRST BEFORE USING ANY FUNCTION OF WATCH.

SELECT A CITY

PRESS **MODE** TO ENTER CITY MODE.

1. PRESS **SET** TO SELECT OF 400 CITIES (COUNTRY CODE FLASHING-INTERNATIONAL DIALING TELEPHONE CODE & CITY NAME APPEAR ON SCREEN)
2. USE **UP** OR **DOWN** TO SELECT THE DESIRED CITY
3. PRESS **SET** AGAIN TO FIX THE ALL RELATED DATA FOR YOUR SELECTED CITY.

 
ALSO QIBLA DIRECTION WILL APPEAR ON LEFT OF SCREEN. THE DISPLAYED QIBLA DIRECTION IS BASED ON THE TRUE NORTH, CONSIDER THIS WHEN USING MAGNETIC COMPASS.

- IN CASE TO SELECT COUNTRY CODE & CITY NAME, YOU WILL GET THE CORRECT AZAN TIMES AUTOMATICALLY.

المزايا:

- * توقيت عالمي وإمكانية ضبط أوقات الأذان الخمس في ٤٠٠ مدينة
- * صوت أذان كامل
- * تقويم ميلادي وآخر هجري
- * إمكانية تحديد اتجاه القبلة
- * خاصية التنبيه التلقائي
- * منبه يومي
- * التوقيت الصيفي
- * خلفية مضيئة
- * مؤقت

وصف المفاتيح

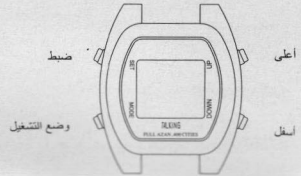

وضع التشغيل

اضغط على مفتاح **وضع التشغيل** لتغيير وضع التشغيل بالترتيب التالي:



يرجى ملاحظة: يجب الدخول إلى وضع "المدينة" لتحديد إحدى المدن بداية وقبل استخدام أي وظيفة من وظائف الساعة.

تحديد المدينة

اضغط على مفتاح **وضع التشغيل** للدخول إلى وضع المدينة.

١. اضغط على مفتاح **ضبط** للاختيار من بين ٤٠٠ مدينة (يظهر على الشاشة

كل من رم القطر - مفتاح الاتصال الدولي واسم المدينة)

٢. استخدم مفتاح **أعلى** أو **أسفل** لتحديد المدينة المطلوبة.

٣. اضغط على مفتاح **ضبط** مرة ثانية لضبط كافة البيانات الأخرى المتعلقة بالمدينة التي قمت بتحديد.

كما سيظهر اتجاه القبلة في الجهة اليسرى من الشاشة. ويقوم اتجاه القبلة المعروض على الشمال الحقيقي، لذا يرجى مراعاة ذلك عند استخدام بوصلة مغناطيسية.

● في حالة تحديد رمز القطر واسم المدينة، سوف تحصل على أوقات الأذان الصحيحة تلقائياً.